



Knowledge Base


powered by  **ALARM.COM**

What do the LEDs on the ADC-V722W mean?



LED pattern	Status	Description
Green Solid 	Connected to the internet	Local network and internet connection with Alarm.com IP.
Green Flashing 	Local network connection	Local network connection with the local IP address, no internet. Note: If the LED does not go to solid green after a few minutes, see Camera LED is blinking green .
Red Solid 	Power on, or no network connection	Power on, system booting up typically 60-90 seconds. If solid red for longer than 60-90 seconds, then there is no local or Internet connection.
Red Flashing 	Power on, or firmware update	The camera is powering on, or a firmware update is in progress.
Blue Flashing 	WPS mode	WPS mode is active. To enter WPS mode, press and hold the WPS button for about three seconds.
White Flashing 	AP mode	Wi-Fi access point (AP) mode is active. To enter AP mode, press and hold the WPS button for about six seconds.



<p>Red & Green Flashing</p> 	<p>Factory reset</p>	<p>The camera is restoring to factory default settings.</p> <p>Caution: If the camera is already installed, it may need to be removed from the Alarm.com account and re-added after a factory reset.</p> <p>To perform a factory reset, press and hold the WPS button for about 10-15 seconds.</p>
---	----------------------	---

Additional resources



Enroll in the [Video as a Service 201](#) training course today! For more information on accessing Academy Training, see [How can I access Academy Training?](#)

