



Danalock V3 US




www.danalock.com

Table of content

0. Parts involved	5
1. Download the Danalock app	6
2. Get your tools together	7
3. Check door alignment	8
4. Secure outside keyhole	9
5. Remove inside thumb-turn	10
6. Select a backplate	11
7. Remove the paper from the stickers	12
8. Fasten backplate	13
9. Select tailpiece adapter	14
10. Insert adapter into Danalock	15
11. Fit and fasten Danalock	16
12. Align the platemarks	17
13. Fasten the Danalock	18
14. Activate batteries	19
15. Before completing the setup	20
16. Open the Danalock app	21
17. Dismount instructions	22
18. LED-Signals	23
19. Configuring the Danalock V3 with click-commands	24


0. Parts involved

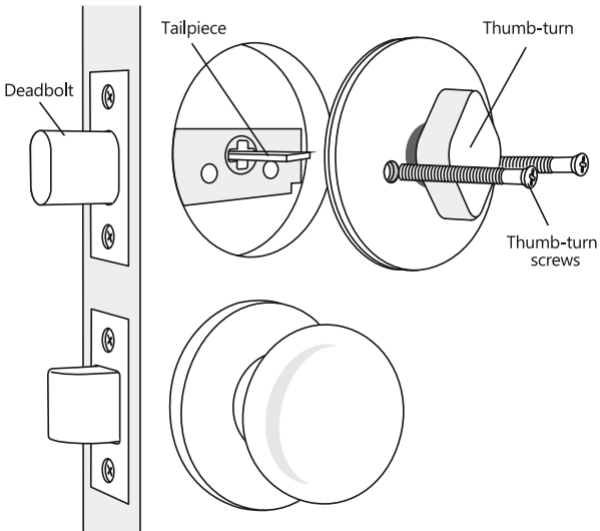

1. Download the Danalock app


Go to Google Play or App Store and download the Danalock app. When the app is installed you create a user profile by pressing the blue ring. You will use this profile each time you sign into the app.

You will need to finish setting the Danalock up in the app after mounting it on the door.

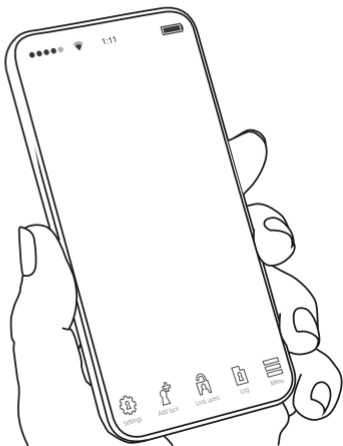

2. Get your tools together


To install the Danalock, you'll need a Phillips screwdriver and tape, preferably masking tape. Should you need to remove or readjust the lock, a pen tip or paper clip will be needed.

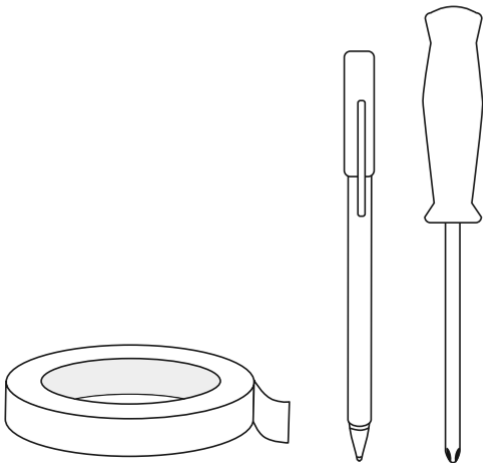


3. Check door alignment

Ensure that your door is properly aligned before beginning installation.

You should be able to lock your door without pushing, pulling, or lifting the door.

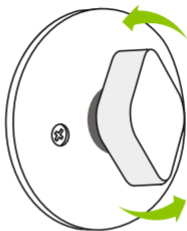


Thumb-turn must move and lock smoothly.

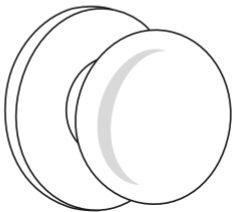


4. Secure outside keyhole

Before removing your existing lock, use tape to secure the outside keyhole. This will keep it in place as you remove the screws on the inside.

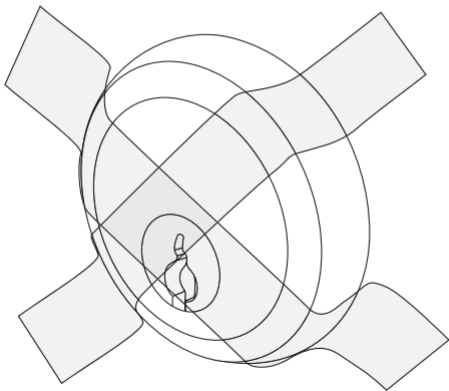


5. Remove inside thumb-turn

Remove the inside thumb-turn, leaving just the deadbolt and tail-piece remaining. Set aside the screws. You'll reinstall them in step 8.

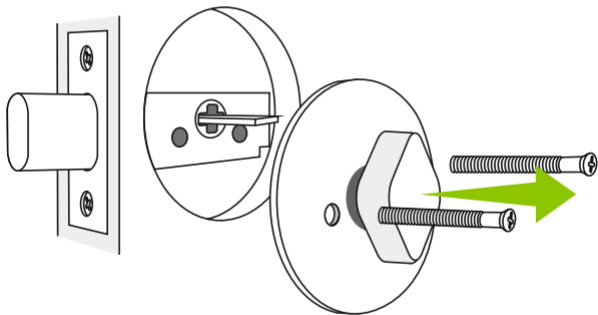

6. Select a backplate


Find the backplate that matches the brand of your existing lock.

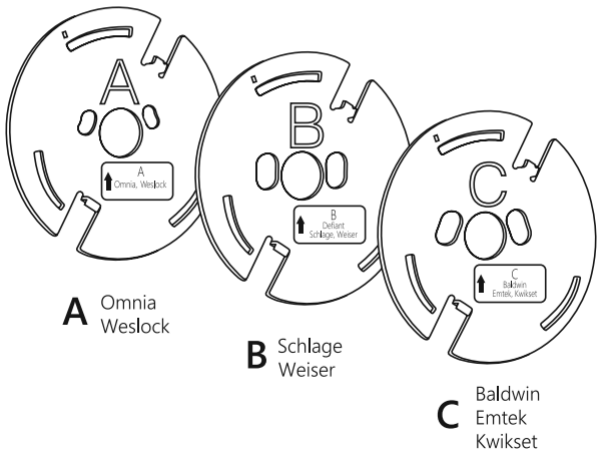

7. Remove the paper from the stickers

On the backside of the backplate you'll find three stickers.



Remove the paper from the stickers.

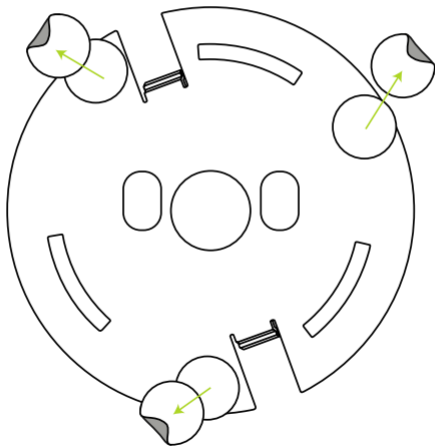

8. Fasten backplate


Fasten the backplate where the thumb-turn was using the two original screws, with the arrow on the label pointing up.

The notches on the backplate must be facing out with the tailpiece centered exactly in the middle hole.

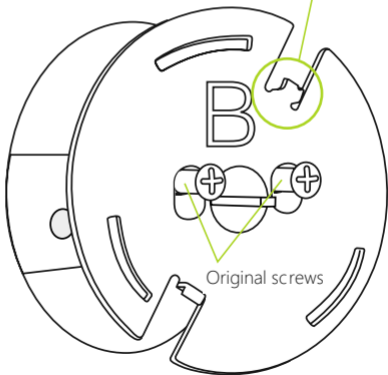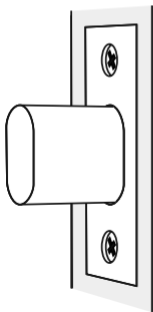

9. Select tailpiece adapter

 
Select the tailpiece adapter that matches the shape of your existing lock's tailpiece.



Baldwin
Defiant
Emtek
Omnia
Weiser
Weslock



 
Baldwin
Kwikset



Schlage
Depends on the length
of your tailpiece.


10. Insert adapter into Danalock

Insert the selected tailpiece adapter into your Danalock and press until it clicks in place.

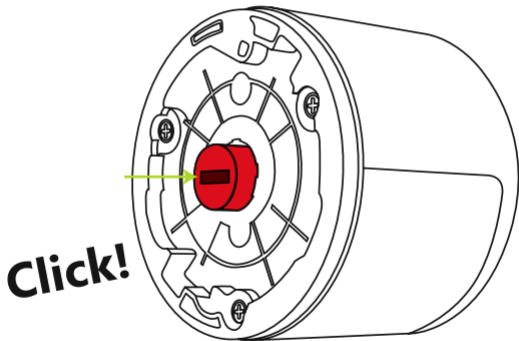


11. Fit and fasten Danalock

Fit the Danalock onto the backplate with the battery cover facing down, the tailpiece sliding into the adapter and the backplate notches into the back of the lock.

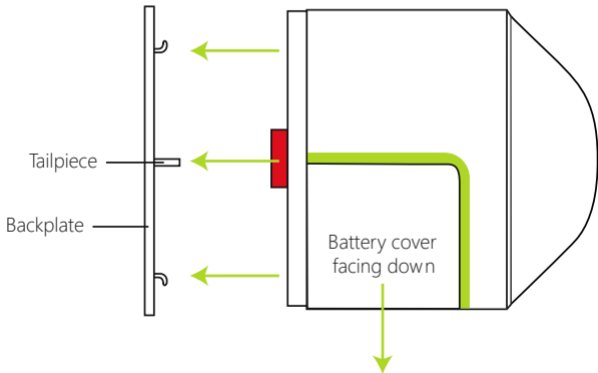

12. Align the platemarks


Find the small marking at the edge of the backplate and align it with the hole in the cover ring surrounding the Danalock. Now you are sure to hit the notches on the backplate with the Danalock.

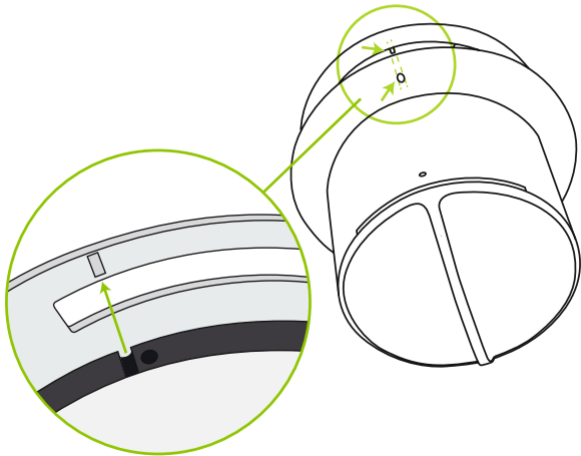

13. Fasten the Danalock


Turn the Danalock clockwise until it clicks to fasten it to the backplate.

NOTE: If you need to unfasten and retry, see "Uninstall instructions" on p. 22.

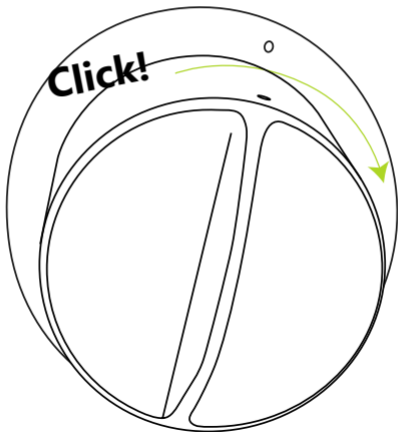

14. Activate batteries

Pull out the plastic tab to activate the batteries. A light will flash to confirm the Danalock is ready.

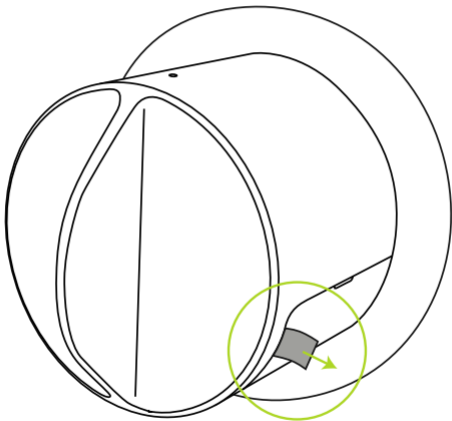


Note: If the batteries are disconnected, you will have to re-calibrate the Danalock.

15. Before completing the setup

Your Danalock is now attached to the door.

Leave the door open, so the lock isn't influenced when calibrated.

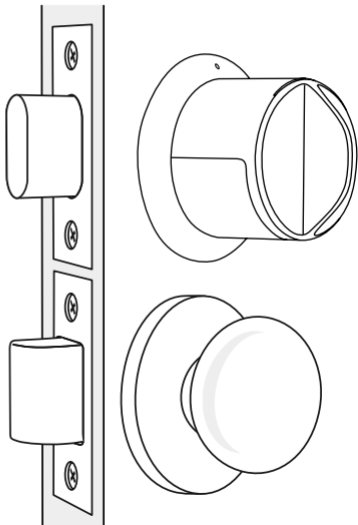

16. Open the Danalock app

Open the Danalock app you downloaded at the start. When you have logged in you will see your empty keychain. Press "Add lock" at the bottom of the screen.


A guide will now lead you through the installation and configuration of your Danalock.



17. Dismount instructions


If at any time you need to dismount the Danalock from your door, insert a pen tip into the hole at the top inner edge of the lock and press while turning the lock counter-clockwise until the lock releases.



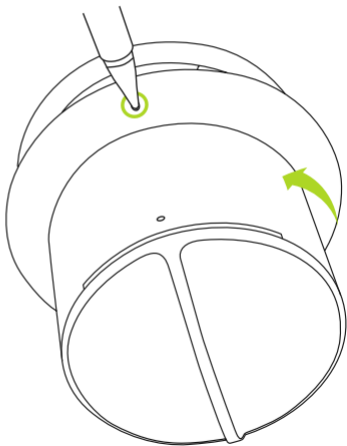



This will not reset the lock or disconnect it from your account, but the lock may need to be re-calibrated if fastened to your door again.

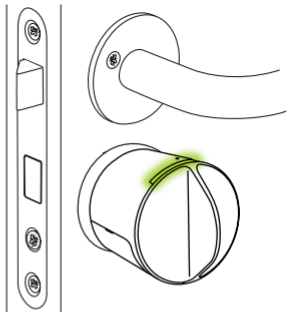

18. LED-Signals

A LED light on the Danalock indicates the status of several operations with different colours:




LED-Mode	LED color	Status indication
Constant red till light finishes		Lock has successfully locked
Constant green till light finishes		Lock has successfully unlocked
Constant white for 3 seconds		Power on. Batteries are activated
Red light flashes every 5 minutes		Critical battery level
Constant purple		Firmware is being updated
Blue light flashes		Settings are changed/saved

19. Configuring the Danalock V3 with click-commands

You can configure the Danalock via the button found in the small hole on the top of the lock. When you click through settings, the LED will change color according to the scheme on the next page.

When you get to the setting you want to change, wait for 5 seconds and the Danalock will react to your command. If you make a wrong number of clicks, just stop at a number of clicks where the LED doesn't light up and wait for 5 seconds. The LED will flash red to indicate that it has timed out.

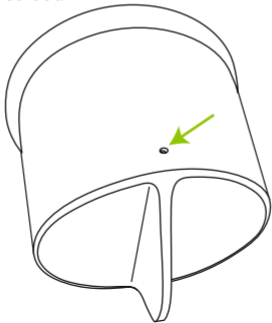

Clicks	Color	Activity
1	Green	Inclusion mode
<p>This mode is used to in- or exclude your Danalock with a Z-Wave or Zigbee gateway. When the Danalock blinks green it is in ex/inclusion mode and you have 30 seconds to pair the Danalock with a gateway.</p>		
2	Yellow	Manual calibration
<p>Turn the Danalock to the desired unlocked position. Start the calibration with the click command and wait for the LED to start blinking yellow. Turn the Danalock to the desired locked position while the LED blinks and click the button once to save the locked position. If the lock doesn't receive a response from you within 30 seconds the calibration will be canceled.</p>		
3	White	Auto calibration
<p>Turn the Danalock to unlocked position and lift the handle if needed. Leave the door open while the Danalock auto calibrates. Start the auto calibration with the click command. The Danalock will blink white while auto calibrating.</p>		
7		Cancel
10	Red	Reset user settings
<p>This action deletes all user settings on the Danalock. The Danalock responds by blinking red.</p>		

Danalock International ApS

Gammel Stillingvej 427C
8462 Harlev, DK

+45 4242 8122
info@danalock.com